

Installation

Measure Slide Room Extension and Length

NOTE: Slide room must extend no more than 42 inches from sidewall to room flange. Match room flange length to left column in **Table A** for awning size selection.

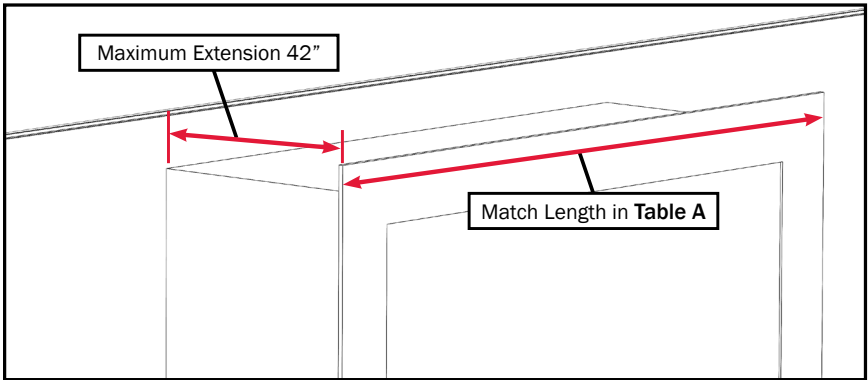


Figure 1

NOTE: Match measurement to first column in **Table B** to determine which bracket configuration is most appropriate.

Measure Bottom of Flange to Center of Awning Rail

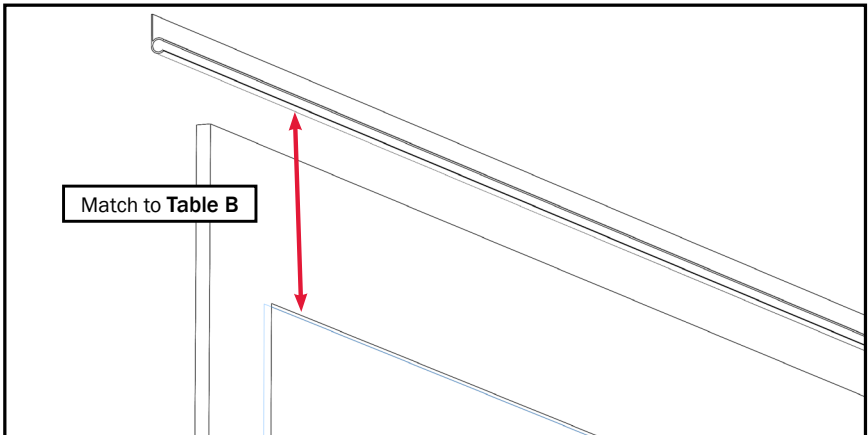


Figure 2

Table A			
Room Flange Length (inches)	Use Awning Size (feet)	Use Awning Size (inches)	Fabric Length (inches)
55-61	5.5	66	61
61-67	6	72	67
67-73	6.5	78	73
73-79	7	84	79
79-85	7.5	90	85
85-91	8	96	91
91-97	8.5	102	97
97-103	9	108	103
103-109	9.5	114	109
109-115	10	120	115
115-121	10.5	126	121
121-127	11	132	127
127-133	11.5	138	133
133-139	12	144	139
139-145	12.5	150	145
145-151	13	156	151
151-157	13.5	162	157
157-163	14	168	163
163-169	14.5	174	169
169-175	15	180	175
175-181	15.5	186	181
181-187	16	192	187

Table B	
Bottom of Flange to Center of Awning Rail (inches)	Bracket Configuration
7-9	Tall
5-7	Middle
3-5	Short