

 
For Worry-free Fuel Transfers, You Can Trust Transfer Flow's TRAX 4™ Fuel Monitoring System.

Know how many miles to go until empty

Shows operating status, including when fuel is being transferred

Fuel levels shown in each tank

Choose to show percentage or gallons of fuel remaining

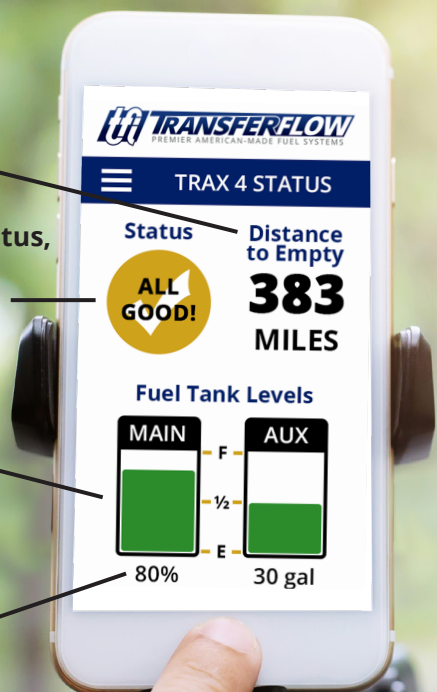






The next generation of our TRAX auxiliary fuel tank operating system is here! TRAX 4™ is our computer-controlled, fuel monitoring system that transfers fuel from a Transfer Flow auxiliary fuel tank to a pickup's main fuel tank. TRAX 4™ comes with all our in-bed auxiliary fuel tanks, including our in-bed auxiliary tank and tool box combos.

Based on the capacity of your pickup's main fuel tank and the capacity of the Transfer Flow auxiliary fuel tank, the TRAX 4™ system will transfer fuel at pre-determined levels while the vehicle is in operation.

Want to know the status of your on-board fuel systems? Simply download the TRAX 4™ app to your smart phone and enter your vehicle and fuel system information. You'll be able to monitor your pickup's fuel capacity in no time! During fuel transfer, the message "PUMP ON" will be displayed on your smart phone. You'll also have the option of displaying either the gallons or the percentage of fuel in each tank.

Phone and phone holder not included.

TRAX 4™ Status Guide

	The vehicle's fuel systems are functioning properly.		Fuel transfer from the auxiliary tank to the main tank is occurring.		There is an error with the vehicle's fuel systems. See TRAX 4™ manual.		Blue tooth connection has been lost.		Vehicle engine is off. Start engine to access data.
--	--	---	--	---	--	--	--------------------------------------	---	---

OPTIONAL ITEM

Monitor the Fuel Level of Your Auxiliary Fuel Tank with an In-cab Display

If you prefer not to use our TRAX 4™ app with your auxiliary tank but still want to know how much fuel is in the auxiliary tank, consider our in-cab fuel level monitor LCD. The LCD shows the fuel level of the auxiliary tank with an easy-to-read bar graph that decreases when fuel is transferred to the pickup's main fuel tank. This item is sold separately.



Fuel Level Monitor LCD (shown actual size)



IN-BED FUEL TANKS REPLACEMENT TANKS REFUELING TANKS TOOL BOX COMBOS



(800) 442-0056 | (530) 893-5209

www.TransferFlow.com