



Your Thomas Payne
Jackknife sofa ships
partially assembled.



THOMAS PAYNE® COLLECTION

by  Lippert Components®

THOMAS PAYNE® COLLECTION

by  Lippert Components®

Tilt front of sofa up to
access the front frame bar
onto which the kick panel
will be positioned (**fig. E**).

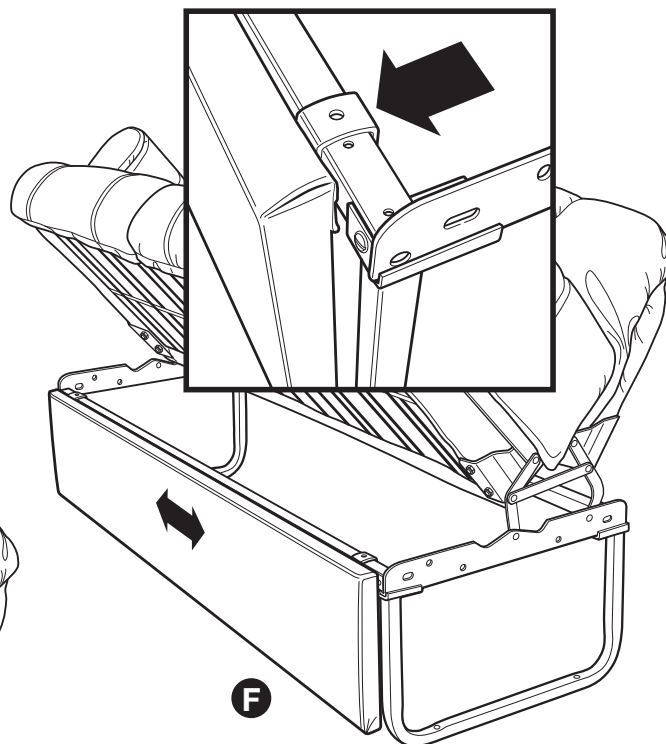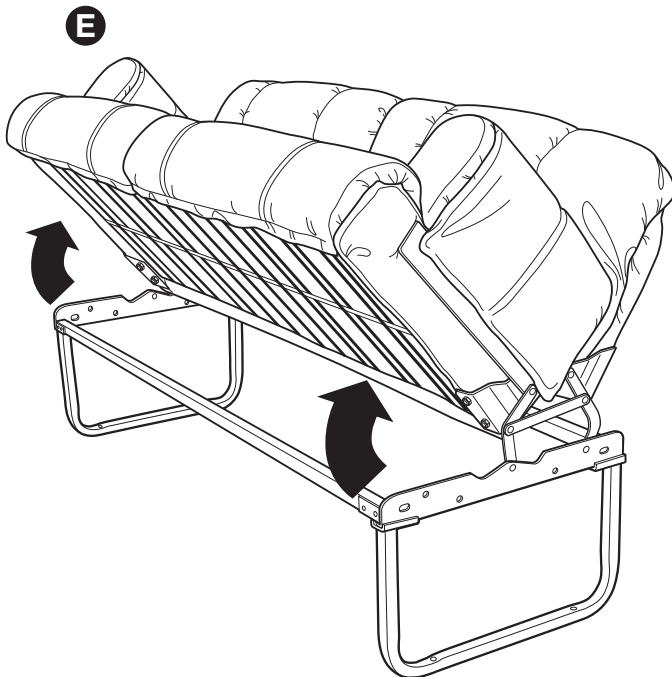

Hook kick panel over the front frame bar
and center (**fig. F**). Drop the front of the
sofa back down and position your new sofa.




**Assembly
instructions for:**
Jackknife Sofas

THOMASPAYNEFURNITURE.COM

THOMAS PAYNE[®]

COLLECTION

by  Lippert Components


Each kit includes the following hardware:

- (4) 5/16"-18 x 3/4" Bolt
(3/4" long, 5/16" diameter, 18 threads per inch)
- (4) 5/16" flat washer
- (4) 5/16"-18 nylock nut



For assembly, you will need any two of the following:

- ratchet with a 1/2" socket
- 1/2" open-end or box wrench
- adjustable wrench


Start assembly by turning the sofa over with the bottom and back lying flat facing up (**fig. A**).

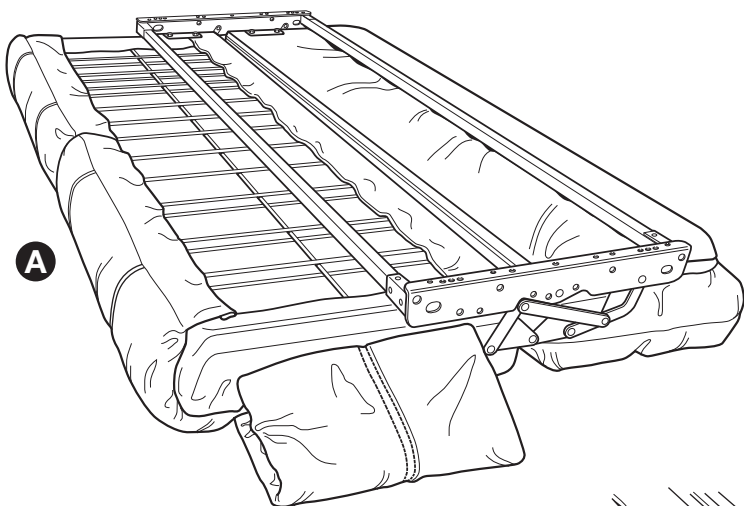

Take the two leg brackets which can be rotated or used on either side of the sofa and align with the corresponding holes in the frame (**fig. B**).

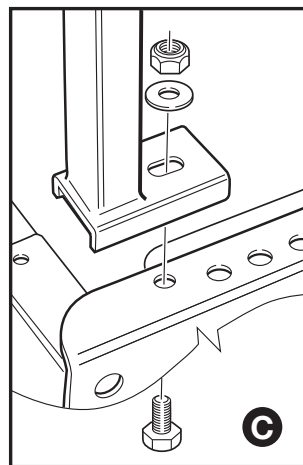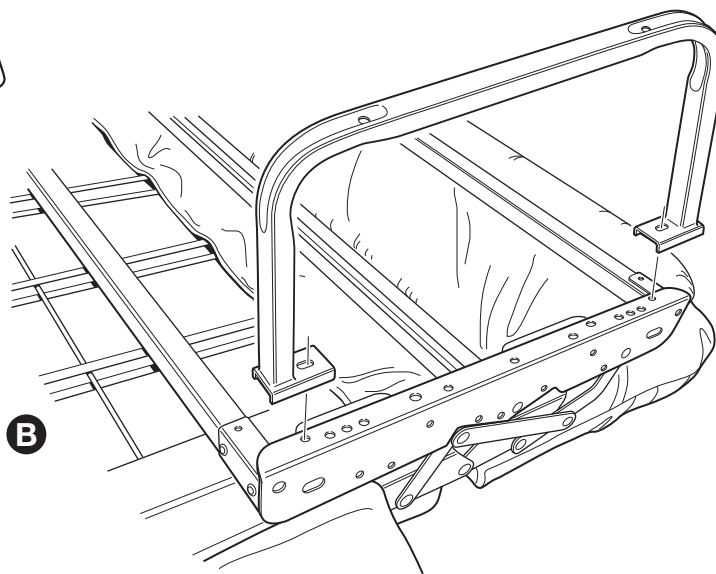

Insert the 3/4" length bolt through the bottom of the frame and attach the washer and nylock nut from the top. Using either a 1/2" socket, open-end, box or adjustable wrench from both above and below, tighten snugly using caution not to overtighten (**fig. C**).

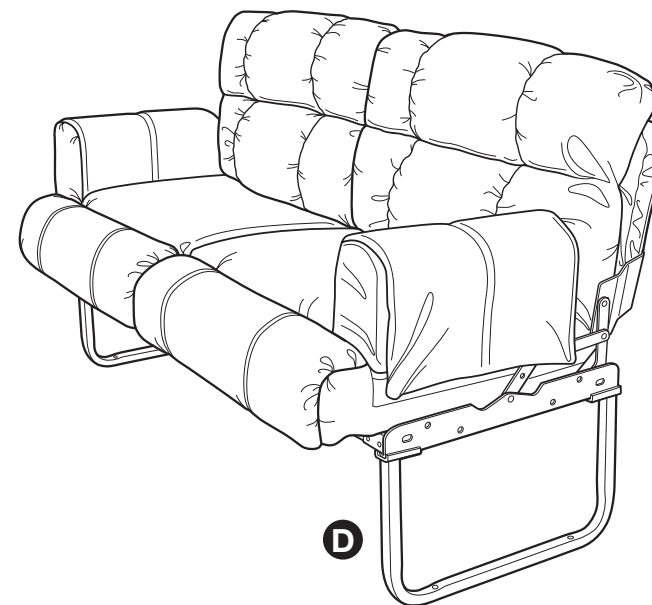

Turn sofa upright to attach the front kick panel (**fig. D**).