



“QUICK-DRAW” OVERHEAD GUN/BOW RACK INSTALLATION INSTRUCTIONS

⚠ WARNING

READ ALL INSTRUCTIONS BEFORE USING THE “QUICK-DRAW” OVERHEAD GUN/BOW RACK

NOTE: Failure to read instructions before use could result in injury or death.

Instructions for Installation and Use:

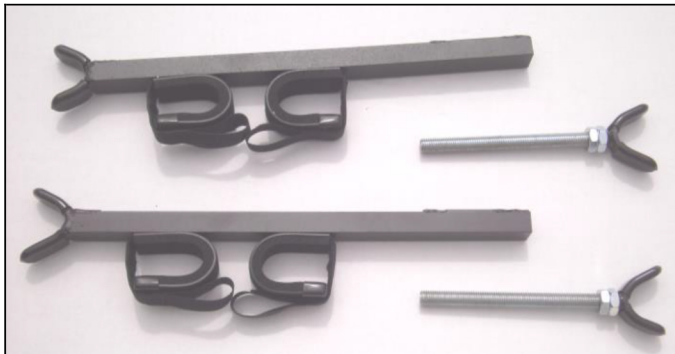


FIG. 1

CONTENTS: SEE FIG. 1

2- GUN/BOW RACK ASSEMBLIES WITH
PRE- INSTALLED GUN/BOW CLIPS

2- ADJUSTABLE TENSION RODS WITH
PRE- INSTALLED NUT AND LOCK NUT

****NOTE****THE FLAT WASHER IS TO BE
INSTALLED BETWEEN THE JAM NUTS
& THE GUN RACK BODY

STEP 1-SEE FIG. 2

PLACE TENSION ROD INTO
GUN/BOW RACK ASSEMBLY.



FIG. 2



FIG. 3

STEP 2-SEE FIG. 3

SELECT DESIRED LOCATION FOR PRODUCT PLACEMENT ON ROLL BARS OF UTV AND ADJUST TENSION ROD OUT TO FIT BETWEEN ROLL BARS.

STEP 3-SEE FIG. 4

TIGHTEN NUTS ON TENSION RODS WITH FINGERS UNTIL SNUG.

FIG. 4A-TIGHTEN NUT AND LOCK NUT SECURELY WITH WRENCH.

****NOTE****MAKE SURE GUN/BOW RACK IS COMPLETELY SECURE BETWEEN ROLL BARS BEFORE PLACING WEAPON INTO RACK.



FIG. 4



FIG. 4A

STEP 4-

LOOSEN VELCRO STRAPS ON GUN/BOW CLIPS, PLACE WEAPON INTO CLIPS THEN SECURE WEAPON INTO CLIPS BY RE-ATTACHING VELCRO STRAPS.

⚠ WARNING

PLEASE READ AND FOLLOW ALL INSTRUCTIONS & WARNINGS INCLUDED WITH THIS PRODUCT.