


# Dock Side

## "Full Face" Profile

### Mounting Instructions

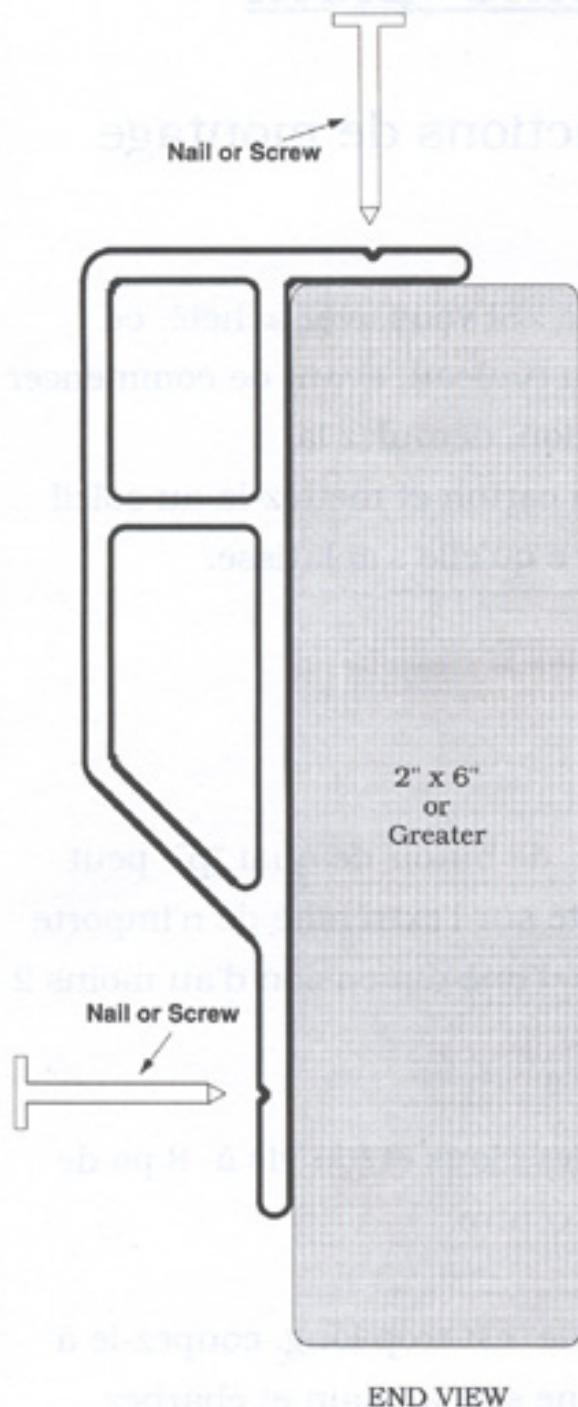

Note: If you have purchased this profile in a roll, before starting installation, unroll the strip from the carton and lay the strip out in the sun for a period of time until the strip lays flat.

The Full Face Dock Bumper Profile can be mounted to the side of any dock with a 2" x 6" face or greater

Space the nails and/or screws on 8" centers


If the profile must be cut to length use a hand saw and deburr the cut end.

Made In Canada  
**DOCK EDGE** 

# Dock Side

## Profilé plein

### Instructions de montage

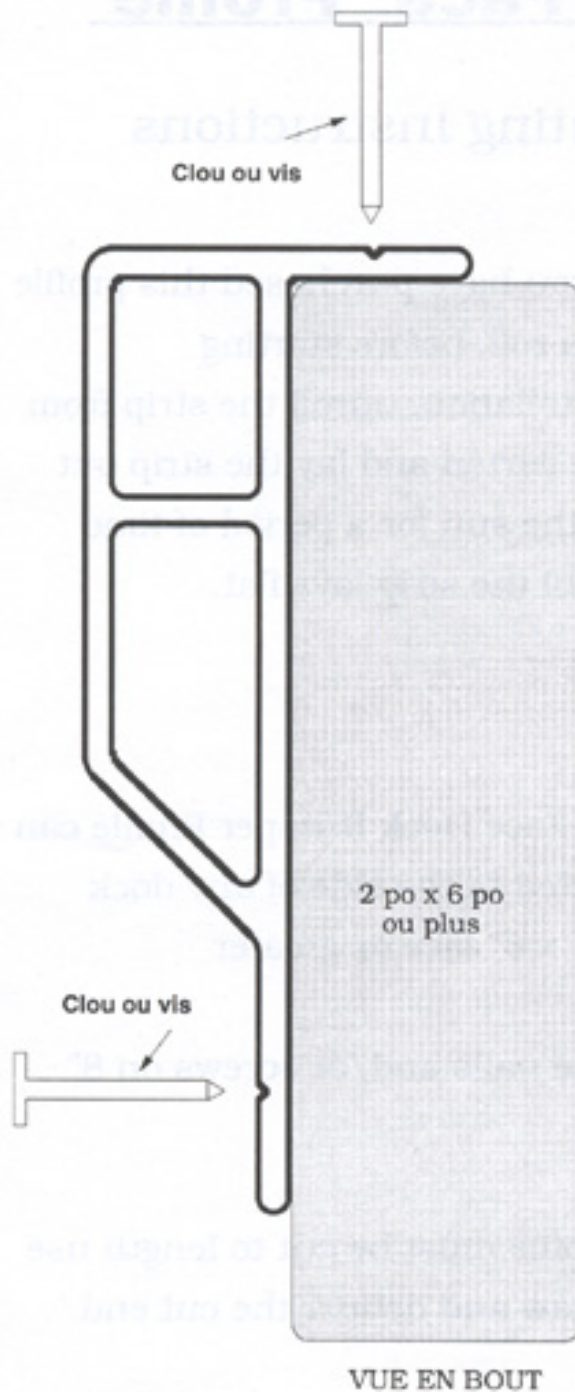

Remarque : Si vous avez acheté ce profilé en rouleau, avant de commencer l'installation, déroulez la bande du carton et mettez-la au soleil jusqu'à ce qu'elle s'aplatisse.

Le profilé de butoir de quai "p" peut être monté sur l'extrémité de n'importe quel quai d'une dimension d'au moins 2 po x 6 po.

Espacez les clous et/ou vis à 8 po de centre à centre.

Si le profilé est trop long, coupez-le à l'aide d'une scie à main et ébarbez l'extrémité coupée.