

JACKKNIFE SOFA ASSEMBLY INSTRUCTIONS

Ensure you have received all Components listed below:

- Two (2) Armrests
- One (1) Kickboard
- One (1) Seat Section
- One (1) Package of 14 screws and washers attached to the corner of the box interior


NOTE: For use with SKUs **141956** (62" Haversack Hazel), **141957** (68" Haversack Hazel), **141959** (72" Haversack Hazel), **142287** (62" Tourist Walnut), **142288** (68" Tourist Walnut), **142289** (72" Tourist Walnut).

1. Attach the Arms to the Kickboard

- Use power tools to attach
- Install one (1) screw & washer in the top, middle, and bottom of the kickboard as indicated in the diagram to the right.

2. Attach the Seat Section to the Armrests

- Lay out the seat section between the armrests and rest the seat side on the kickboard. Ask someone to help stabilize or rest the back cushion side on something level with the top of the kickboard.
 - Use of boxes as shown below may be helpful.
- Ensure that the back cushion side of the seat section is straight and even with the flat/back side of the armrests as shown below.
- Install the first Two (2) screws as indicated below into the backside of back cushion side of the seat section and then remove what you used to prop up the seat section, if applicable.
- Install a total of Four (4) additional screws per side of the seat cushion section.

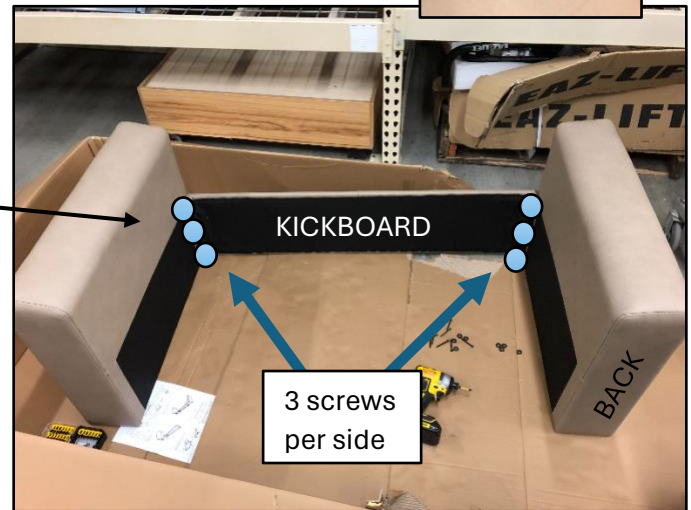

Ask for assistance or use other items to hold up the jackknife while installing the first two screws in the seat section.



Total of 4 screws per side.

Make sure the back end is even with the armrests, so when reclined it lies flush with the wall.



Finished Product