


INSTALLATION INSTRUCTIONS

Thank you for choosing *Ultra Breeze™* Vent Cover from *Fan-Tastic Vent™*. Made in the USA, the *Ultra Breeze* Vent Cover has revolutionized the design of protection devices. Not only does it allow you to keep your vents open in the rain, but the exclusive patent pending airfoil technology allows for up to 75% more airflow than competing products. The Ultra Breeze has been field tested to provide superior protection for your vents, while allowing 95-100% airflow - The highest of any vent cover on the market.

If you have any questions regarding this installation or operation of any Fan-Tastic Vent product please, feel free to contact us toll free 1-800-521-0298, Monday - Friday 8:00am - 5:00pm EST.

Please read the installation instructions entirely before beginning

ULTRA BREEZE KIT (CONTENTS)

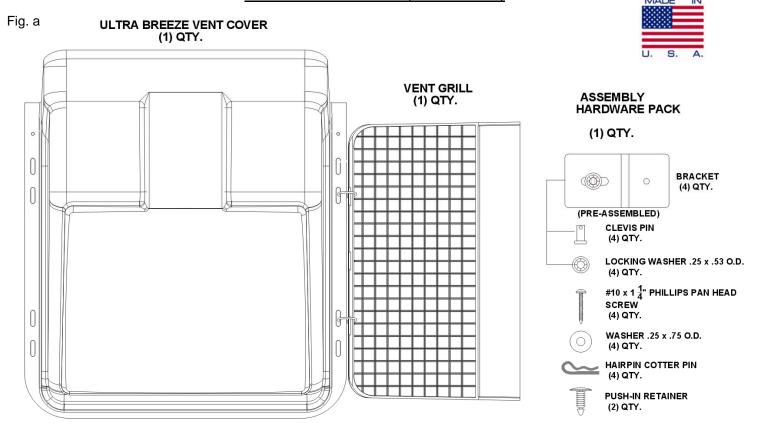

ADDITIONAL ITEMS NEEDED: # 2 Phillips Screwdriver or Screw Gun with the Same Type Insert Bit **ASA** Compatible Waterproof Sealant**


- **Step 1.** Make sure you have all the above listed parts and the correct quantities of each (Fig. a).
- Step 2. Locate the plastic cable ties that secure the Ultra Breeze Vent Cover to the Grill. Cut the cable ties and discard.

^{**} ASA is a trade name abbreviation for Acrylonitrile Styrene Acrylate plastic resin.


ULTRASREEZE

Installation Instructions (continued)

Step 3. To install the grill into the Ultra Breeze Vent Cover use the two Push-in Retainers provided. Position the three slots on the top of the grill onto the 3 tabs located on the under side of the Vent Cover. Align the hole at the bottom side of the grill with the hole on the side of the Vent Cover and insert the Push-in Retainer to secure. Do the same for the opposite side making sure the top of the grill stays secured at the top (Fig. b).

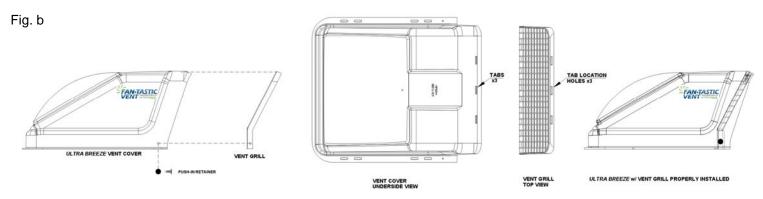

Step 4. Remove 2 #8 x 1" installation screws (2nd from the front and 2nd from the back) from the base on both (curb & driver) sides of your existing Vent (Fig. c). Apply sealer into and around the holes and install the *Ultra Breeze Vent Cover* brackets as shown in Fig. d using the supplied #10 x 1 1/4" Phillips Pan Head Screws.

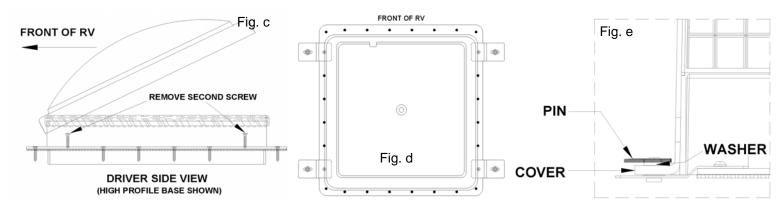

Step 5. To install the *Ultra Breeze Vent Cover*, align the vent cover slots over the Clevis Pins with Washer and secure with the Hairpin Cotter Pin as shown in Fig. e. (rotate the clevis pin & hairpin cotter to best locking location). This concludes the installation process for your *Ultra Breeze*.



