



SLACKLINE AND OBSTACLE SET USER GUIDE

SFMB50FTLTR



Thank you for purchasing the Sunny & Fun™ Slackline and Obstacle Set. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.


This product is covered by a limited one-year warranty. Coverage is subject to limits and exclusions. See warranty for details.

Box Contents

1. 50ft slackline with 20 positions and ratchet set
2. 3 monkey fist holds with lockable delta clips
3. 2 monkey bar holds with lockable delta clips
4. 2 gymnastic rings with lockable delta clips
5. 1 ladder with lockable delta clips

Parts

- A. Slackline with 20 positions and ratchet set
- B. Monkey fist holds with lockable delta clips
- C. Monkey bar holds with lockable delta clips
- D. Gymnastic rings with lockable delta clips
- E. Ladder with lockable delta clips
- F. Carrying case (not pictured)

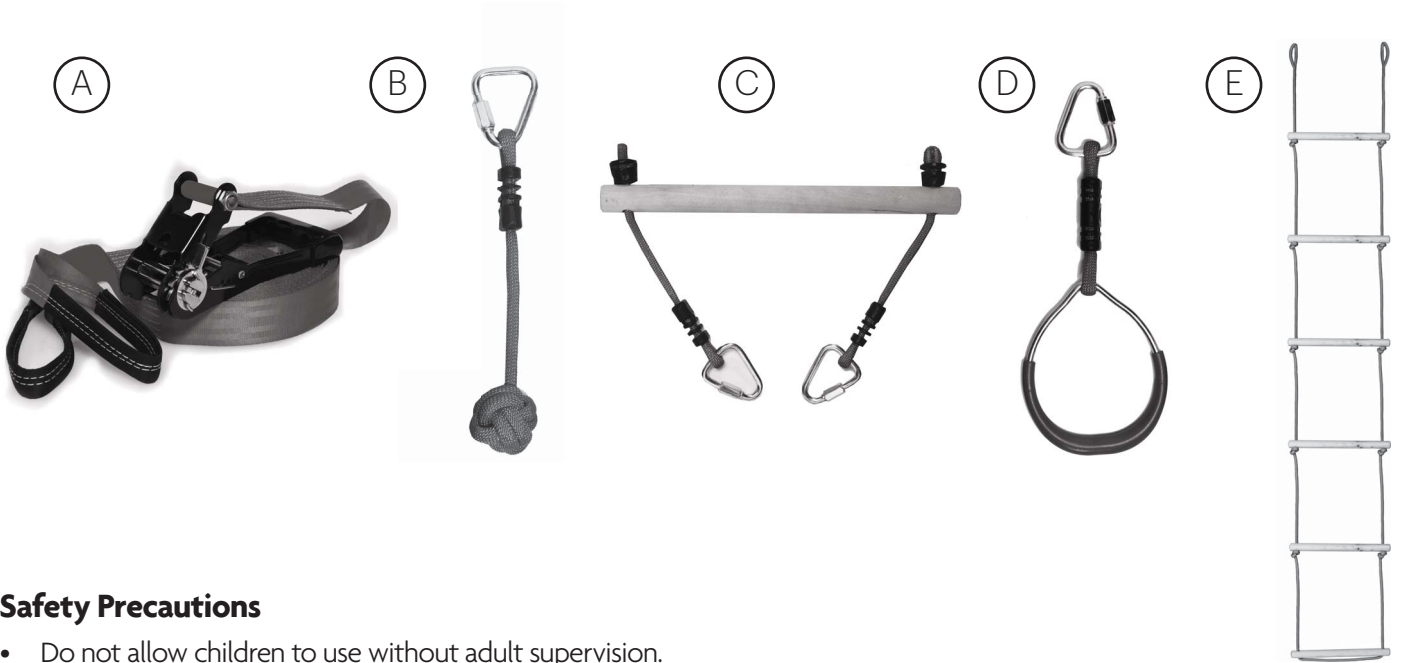

Safety Precautions

- Do not allow children to use without adult supervision.
- Always test the tension and strength of the line before use.
- Do not exceed the max weight capacity of 250 lbs. (113kg).
- Set up the slackline so that the user's feet are no higher than 12 inches (32cm) from the ground.
- Setup of this product should always be performed by an adult, including site and tree selection and all parts of assembly.
- Always check every part for damage before every use.
- Do not use the slackline obstacle course if any part is damaged.
Contact the manufacturer for replacement parts.
Never attempt to replace parts yourself.
- Do not allow more than one person on the slackline at a time.
- Do not attach the line to a tree that is not healthy, is diseased, or is damaged. The tree may fall or the line may not hold, resulting in serious injury or death.
- Always wear close-fitting, athletic style clothing. Do not wear scarves or other loose clothing that may become entangled.
- Do not use the line in wet or damp conditions, or if there is rain or lightning in the area.
- Always set up the slackline during the day under sufficient lighting, never at night.
- Consult a physician before engaging in any new exercise activity or routine.


Choosing a setup location

1. Choose a clear area to set up the slackline. A healthy tree with a 38" (97cm) circumference or 12" (30.48cm) diameter is recommended.
2. If using a pole or post, be sure that it can withstand at least 2500 lbs. (1134kg) on each end.
3. Select a location that is easily supervised, such as the backyard within viewing distance of a window.
4. It is not recommended to set up over swimming pools, ponds, streams, or rivers.

For best results: set up the slackline over soft grass that is clear of bushes, rocks, or anything else that may cause injury. It is also recommended to place cushioning materials under and around the slackline in case of falling.


Installing the Slackline

1. To determine the height of the course, have the shortest user reach up above their head, as high as possible.
2. Measure the height from the ground to the fingertips, then add an additional 24 inches (62cm). This should allow for 12 inches of clearance from the ground when the line is in use.
3. After selecting two trees, wrap the ratchet and its line around the one with a smaller diameter. Lead the ratchet through the looped end of the line as seen below. Be sure to keep the line flat as you lead it through.
4. Pull the ratchet until the line is securely in place, as seen below.
5. Take the other line and, using a stable stepladder, wrap around the other tree. Tighten the line, while keeping it flat and not twisted. Pull the loose end of the line through the looped end as seen below.

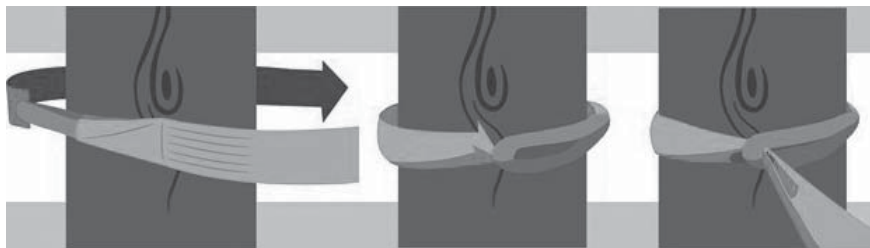

Obstacle Course Setup

1. Note the location of each sewn-in delta clip pocket on the slackline. This is where the obstacles can be attached. *Never attach the obstacles anywhere else on the slackline.*
2. Open the delta clip on each obstacle you wish to use by twisting the lock open.
3. Attach each obstacle using the attached delta clips, keeping in mind how far the intended user will be able to reach. Slip each delta clip into the sewn-in pocket, then lock the delta clips.

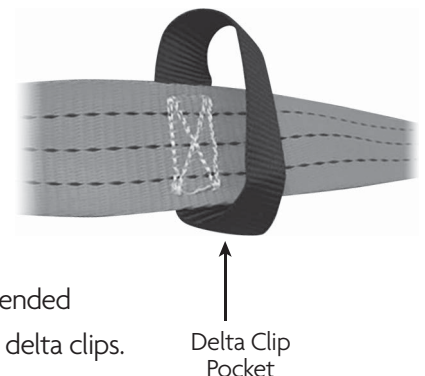

NOTE: do not remove the delta clips when the slackline is under tension.

Recommended courses:

Beginners: use the monkey rings and monkey bars only and space them close together.

Intermediate: use the beginner layout, but add the monkey fist to the start of the course.

Advanced: add up to 12 obstacles to the course, spacing them further apart for added difficulty.


Tightening the Slackline

1. Before tightening the slackline, check that both ends are at the same height.
2. With the ratchet facing downward, feed the end of the slackline through the ratchet, keeping the line flat and untwisted. Pull the end through until there is no slack left in the line.
3. Once all slack has been pulled through, use the lever arm on the ratchet to tighten the line.
4. The line is tight enough when it only bends slightly when pulled.

Loosening the Slackline

Always loosen the line before attempting to reposition obstacles or take down the line.

1. Pull the safety latch inside the ratchet handle and open the ratchet all the way until it is completely flat. There will be a loud click.
2. Pull the slackline until the tension has loosened.

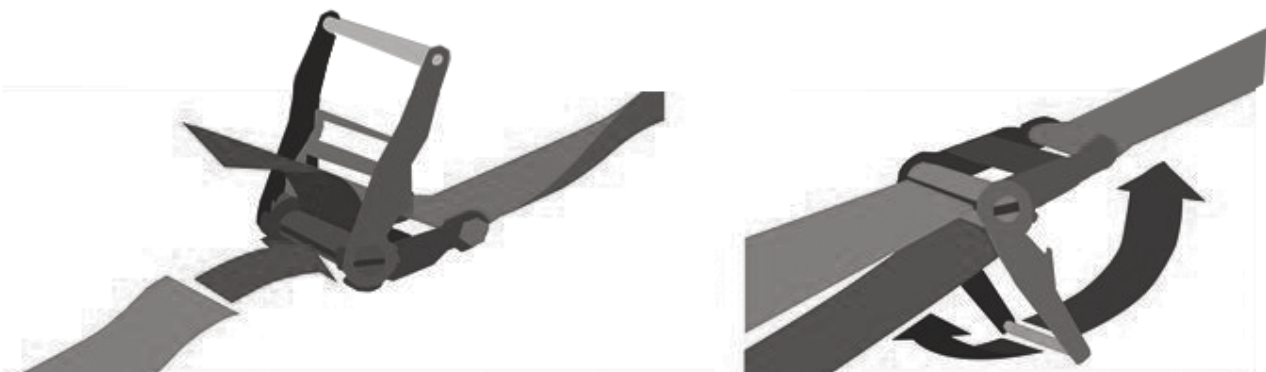

Stress Testing the Line

1. Make sure that all connections are tight and secure.
2. Suspend either a 250 lbs. weight or a person from 5 feet on each end of the slackline.
The line should securely hold the weight in place with very little give.

NOTE: Any bystanders should maintain a safe distance of 10 ft. from the person performing the stress test.

Tips for Using the Slackline with Obstacles

- Set up a step ladder at the beginning and end of the course.
- When starting out, it may be helpful to start with the slackline in a lower position, so that the user can stand on the tips of their toes while they get used to using each obstacle.
- Do not expect to be able to complete the course on the first few tries.
The more you use the course, the more your muscles will develop, making the course seem easier.
- For added difficulty, try adding more obstacles or increase the space between each obstacle.

Care and Maintenance

At the beginning of the play season:

1. Tighten all hardware: check the line, ratchet, Delta clips, and all connections for any sign of looseness, damage, wear, fraying, or sharp edges and replace as needed.
2. Lubricate all metallic parts: use grease or lubricating oil to lubricate the Delta clips for easy opening, and the ratchet for smooth tightening.
3. Check all protective coverings on bolts, pipes, edges and corners. If they are loose, cracked, or missing, replace before use.
4. Check any wooden parts for deterioration and splinters. Sand down splinters and replace any deteriorating wood parts.
5. Check all moving parts: check all grips for rust, wear, or other deterioration and replace as needed.
6. Check all metal parts for rust: if found, sand and repaint with a nonlead-based paint meeting the requirements of 16 CFR 1303.
7. Loose-fill materials: maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber, or shredded/recycled rubber mulch for equipment up to 8 feet high, or 9 inches of sand or pea gravel for equipment up to 5 feet high.

NOTE: an initial fill level of 12 inches will compress to about a 9 inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain a depth of at least 9 inches.

Once a month during the play season:

1. Lubricate all metallic parts: use grease or lubricating oil to lubricate the Delta clips for easy opening, and the ratchet for smooth tightening.
2. Check all protective coverings on bolts, pipes, edges and corners. If they are loose, cracked, or missing, replace before use.
3. Check all moving parts: check all grips for rust, wear, or other deterioration and replace as needed.
4. Perform the load stress test.
5. If using a step ladder or similar, check it every month for looseness, stability, and wear.

Twice a month during the play season:

1. Tighten all hardware.
2. Check all protective coverings on bolts, pipes, edges and corners. If they are loose, cracked, or missing, replace before use.
3. Rake and check the depth of loose-fill surfacing materials to prevent compaction and to maintain an appropriate depth. Replace as necessary.

At the end of the play season or when the temperature drops below 32°F:

1. Take down the slackline when not in use for long periods of time or the temperature drops to below 32°F (0°C).
2. Store the slackline, all obstacles, and user guide in a safe place where none of the parts will become damaged or lost.
3. Always check the line, ratchet, delta clips, and all connections for looseness, fraying, or any other damage before every use.
4. Clean with water and a mild detergent. Allow to dry completely before storing.

PRODUCT DISCLAIMER AND NOTICE

The installation and use of this product with or without obstacles or as a slackline with the ratchet and other related gear is potentially hazardous. When installing or using this product, always keep in mind the following:

- Check section 4 of the United States Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook: www.cpsc.gov//pagefiles/122149/325.pdf.
- Instruct children to only use the equipment in the way it was intended. Do not allow any other use.
- Do not allow children to wear items such as, but not limited to, loose fitting clothing, hooded shirts, shirts with drawstrings, scarves, cord-connected items, capes, and ponchos. Wearing these items while using the slackline can result in death by strangulation.
- Instruct children to wear well-fitting and full-foot enclosing shoes. Inappropriate footwear includes clogs, flip flops, and sandals.
- If using a step ladder or similar, check it every month for looseness, stability, and wear.
- Instruct children to not attach any items to the slackline that are not specifically designed for use with this product, such as, but not limited to, jump ropes, clothesline, pet leashes, cables, and chain as they may cause a strangulation hazard.
- Instruct children to remove their bike or other sports helmet before using this product.
- Obtain training and instruction regarding the proper use and the safety precautions to follow.
 - a) Ensure proper and adequate supervision and instruction of both yourself and others using this equipment.
 - b) Make sure that all equipment is properly maintained, is in good working order, and is inspected for damage and/or wear prior to each use.
 - c) You assume all risks and accept full responsibility for any injury (including death) or damages that may occur from the use of this product.

All information provided in this user guide is not to be considered professional instruction or advice. It is recommended and encouraged to seek professional instruction regarding specific questions about usage, location, installation, or any other aspect of training courses and slacklines.

Customer Service

info@supportcbp.com
833-217-4422

Distributed by
C&A Marketing, Inc.
114 Tived Lane East
Edison, NJ 08837 USA

Europe: C&A Europe
167 Hermitage Road
Crusader Industrial Estate
London N4 1LZ
United Kingdom

info@supportcbp.com

Made in China
Sunny&Fun is a trademark of
C&A IP Holdings, LLC in the U.S.
©2018 All rights reserved